

INDEX

For 1955 Chev Truck Assembly Manual - 31xx/32xx Series

(1/2-Ton Pickups ONLY - Not Panel Trucks)

A

Accelerator - See also "Throttle":	
Control Shield	446
Linkage:	
L-6	359
V-8 ²	698, 709, 716-717
Pedal	359
Return Spring	359
Access Covers - Transmission (in Floor)	101, 636
Air Cleaner:	
L-6	370, 598-601
V-8 ²	701
Air Cushion Seat (RPO-269)	615-616
Air Vent - Kick Panel	110-111, 113
Generator:	
Drive Belts & Pulleys	381
Installation:	381
Wiring	475
Ammeter	493-494, 498-499
Antenna	NRF ¹
Anti Freeze Chart	573
Anti-Spin Differential	NRF ¹
Arm Rest - Door	141
Ash Tray	121
Assembly:	
Bed	127, 129-130, 215-220
Chassis (Riveting)	257, 259, 261-263, 283, 285, 291, 297-298
Automatic Trans - See "Transmission - Automatic".	
Axle - Rear	296, 300, 303

B

Back-Up Lamp & Switch	483-484, 514-516
Baffle - Upper - See "Hood Latch Panel".	
Ballast Resistor	355, 504
Battery (Box, Cables, etc.)	477, 480, 498-499, 503
Bell Housing	
Auto Trans	621
Manual Trans	369
Belts - See "Drive Belts"	
Bed:	
Assembly	127, 129-130, 215-220
Instruction Index	211-214
Sealer (3124 Only)	236
Side Outer Panel (3124 Only)	127, 129-130
Blower Assembly - Heater	NRF ¹
Body Panels - See "Sheet Metal".	
Body Fitment	151
Body Mounts	96-97, 99
Box - See "Bed".	
Brace - Fender, Front	444-445
Brace - Fender, Rear	467
Brackets - Bumper, Front	561
Brackets - Bumper, Rear	
3124	565-566
Other Models (RPO-218)	602-603
Brakes:	
Adjustment	349
Bleeding Instructions	348
Brake Lamp Switch	477, 480, 497, 505
Lines & clips	315-316, 322-323, 326- 327, 331, 347
Master Cylinder	327-328, 331
Parking (cables, etc.) & Installation	317, 337-339, 343, 630
Pedal Assembly	327-328
Power (Vacuum - RPO-213)	595-597
Bulkhead - See "Firewall"	
Bumper:	
Front:	
Instruction Index	561
	560
Rear:	
3124 (Cameo)	565-566
Other Models (RPO-218)	602-603
Bumper - Door	120
Bumper - Hood	462
Button - Horn	418, 493-494

¹ NRF = No Reference Found.

² For completeness, review L-6 info when accessing V-8 info.

INDEX

For 1955 Chev Truck Assembly Manual - 31xx/32xx Series

(1/2-Ton Pickups ONLY - Not Panel Trucks)

C		D	
Cab:		Dash:	
Gravel Deflector	567	Instrument Control Bezel (Panel)	107, 477, 480, 493-494
Mounts	96-97, 99	Insulator (Firewall Pad)	94
Sealer	221-226	Wiring	477, 480, 493-494
Cable - Heater Control	NRF ¹	Dash Panel - See "Firewall".	
Cable - Speedometer	477, 480, 493-494, 516, 521	Decal - Valve Cover	388
Cameo - See Specific Area of Interest		Defroster	NRF ¹
Cap - Horn ("Button")	418	Deluxe Equipment	733-734
Carburetor:		Dimmer Switch	477, 480, 505
Choke Cable:		Dipstick - Oil:	
L-6	383	L-6	376
V-8 ²	701, 709	V-8 ²	703
Installation:		Dipstick - Transmission (Auto)	NRF ¹
L-6	370	Disc Assembly - See "Hubcap".	
V-8 ²	701	Distributor:	
Vacuum Lines	180, 370, 378	L-6	353
Caution Tag (on Steering Wheel)	389	V-8 ²	697
Cement - Use of	7	Dome Lamp	116, 117, 493-494, 497
Chassis:		Door:	
Assembly Instructions (Riveting)	257, 259, 261-263, 283, 285, 291, 297-298	Arm Rests	141
Dimensions	267-268	Bumper	120
Instruction Index	243-244	Clearances	151
Choke Cable:		Glass	134, 139
L-6	383	Glass Run Assembly	134-135, 139
V-8 ²	709	Handle	136-137
Cigarette Lighter	733	Hinge	118, 142
Clamps & Hoses - Radiator	378	Hinge cover	142
Clearances - Body & Bumper	151	Instruction Index	132
	11, 315-316, 347, 405-408, 483-484, 514-516, 522	Jamb Switch (Courtesy Lamps)	NRF ¹
Clip Locations (on Frame)		Latch/Lock	120, 136-137
Clutch:		Mouldings (Reveal, Garnish)	134, 147, 733
Adjustment Instructions	364	Remote Control Assembly	137
Fork	365, 369	Sealer	240
Instruction Index	350	Trim Panel	140-141
Linkage	365	Weatherstrip	148
Pedal	365	Window:	
Throwout Bearing	369	Regulator	135, 140
Coil	353, 477, 480, 498-499	Sash	134-135, 139
Control Panel - See "Instrument Panel".		Seal	135
Coolant Temp Sending Unit	493-494, 520, 711-713	Downshift Adjustment Procedure	640-641, 643
Cooling Fan	381	Draincock	538-539, 692, 694-695
Cooling Lines - Auto Trans	632	Drive Belts	381
Core Support:		Drive Shaft	307
Installation	530-532, 540	Duct - Defroster	NRF ¹
Filler Panels	533-535		
Cover, Wheel - See "Hubcap".			
Covers - Transmission (in Floor)	101, 636		
Cowl:			
Grille (exterior)	110		
Vent (interior)	110-111, 113		
Seal (to Hood)	444, 462		
Cozy Wing	134, 138-139		
Crankcase Ventilator Pipe	376		
Crossmember & Mounts - Transmission:	387		
Cylinder Block - See "Engine"			

¹ NRF = No Reference Found.

² For completeness, review L-6 info when accessing V-8 info.

INDEX

For 1955 Chev Truck Assembly Manual - 31xx/32xx Series

(1/2-Ton Pickups ONLY - Not Panel Trucks)

E

Electric Windshield Wiper (RPO-320)	662	Engine - V-8 ² :	
Electrical System - See also "Wiring".	472-525	Air Cleaner	701
Emblems:		Accelerator Linkage	698, 709, 716-717
Fender	466, 715	Carburetor	701, 709
Hood	464	Choke cable	709
Emergency Brake - See "Parking Brake".		Coil	711
End Gate - See "Tailgate".		Coolant Drain Plug	692, 694-695
Engine - L-6:		Dipstick - Oil	703
Air Cleaner	370, 598-601	Distributor	697
Accelerator Linkage	359	Emblems	715
Carburetor	383	Exhaust Manifold & Pipes	703, 706
Choke cable	383	Fan, Pulleys and Belts	700
Coil	353, 477, 480, 498-499	Fuel Pump and Lines	699
Coolant Drain Plug	538-539	Ground Strap	711
Dipstick - Oil	376	Ignition Switch	709, 711-712
Distributor	353	Instruction Indices	691-693
Exhaust Manifold & Pipes	410-411	Mounts	702
Fan, Pulleys and Belts	381,	Oil Filler Tube & Cap	701
Fuel Pump & Lines	370, 378, 405-409	Oil Filter	704
Ground Strap	633	Oil Pressure Gauge (no sending unit)	713
Ignition Switch	383, 477, 480, 493-494, 514, 516	Radiator Area	691-692, 694-696, 699
Instruction Index	350	Road Draft Tube	702, 705
Mounts	387	Sheet Metal:	
Oil Filler Cap	351, 377	Fender Emblem	715
Oil Filter	604-605	Spark Plug Wiring	697
Oil Pressure Gauge (no sending unit)	520	Starter	702
Pulleys	381	Throttle cable	709
Radiator Area	378, 526-559	Transmission Linkage	707-708, 716-717
Spark Plug Wires/Brackets	353	Water Temp Gauge & Sending Unit	711-713
Starter/Solenoid:		Windshield Wiper Vacuum Hose	701
Installation	356	Wiring:	
Wiring	477, 480, 498-499	Battery Cables	693, 711
Transmission Linkage:		Generator	710
Automatic	622-628, 639-644	Headlights	710-712
Manual	392-393, 395-396	Horn	711-712
Water Temp Gauge & Sending Unit	493-494, 520	Ignition Switch	709, 711-712
Windshield Wiper Vacuum Hose	108	Schematic	714
Wiring:		Starter	711
Battery Cables	477, 480, 498-499	Exhaust System:	
Generator	475, 665	L-6	410-411
Headlights	117, 475, 477, 480, 489, 493-494, 497	V-8 ²	703, 706
Horn	475, 490-492, 733	Exterior Rear View Mirror	144, 589-591
Ignition Switch	477, 480, 493-494, 514, 516		
Schematic	523-525		
Starter	477, 480, 498-499		

¹ NRF = No Reference Found.

² For completeness, review L-6 info when accessing V-8 info.

INDEX

For 1955 Chev Truck Assembly Manual - 31xx/32xx Series

(1/2-Ton Pickups ONLY - Not Panel Trucks)

F

Fan - Cooling	381
Fender - Front:	
Braces	444-445
Emblems	466, 715
Inner	447-448, 450
Installation	444-445, 447, 449-450
Sealer/Seals	235, 237, 446-447, 449-450
Series Designation Moulding	466
Skirt (Inner Fender)	447-448, 450
Fender - Rear:	
Braces	467
Installation	467
Sealer/Seals	235
Fender Skirt - See "Inner Fender"	
Filler Panels - Grille Area	533-535
Filler Pipe - Auto Trans	NRF ¹
Filler Tube - Oil	376
Firewall:	
Grommet	383
Hole Tape	241-242
Insulation Pad	94
Fitment - Body & Bumper	151
Fittings - Lubrication	6
Floor Mats	94
Flywheel & Cover	369, 621
Fork - Clutch	365, 369
Four Speed Transmission (RPO-318)	657-661
Frame (See "Chassis"):	
Fresh Air Vent - Kick Panel	110-111, 113
Front Spring	283, 285, 288
Front Suspension:	
Assembly	283, 285, 288-294
Instruction Index	282
Fuel:	
Cap	399-400
Gauge	493-494
Instruction Index	397
Lines	370, 378, 405-409
Pump:	378, 409
Sending Unit	399-400, 483-484, 507-508, 510
Tank	399-400, 405-407
Fuse	497

G

Gas - See "Fuel"	
Gauges	477, 480, 493-494
Garnish/Reveal Mouldings:	
Door	134, 147, 733
Rear Window	105, 733
Windshield	104, 733
Gear Selector Indicator - Auto Trans	625
Gearshift - See "Shifter"	
Generator:	
Drive Belts & Pulleys	381
Heavy Duty (RPO-326)	663-665
Installation:	381
Wiring	475
Glass Run Assembly - Door	134-135, 139
Glove Box	122
Glue - Use of	7
Governor Equipment	606-607
Gravel Deflector - cab	567
Grille:	
Cowl	110
Front	526, 529, 537
Grommet - Firewall	383
Ground Strap:	
Engine	633, 711
Group - See "Section".	

¹ NRF = No Reference Found.

² For completeness, review L-6 info when accessing V-8 info.

INDEX

For 1955 Chev Truck Assembly Manual - 31xx/32xx Series

(1/2-Ton Pickups ONLY - Not Panel Trucks)

H		I	
Handle - Door	136-137	Identification Plate - See "Trim Tag" and "VIN Plate".	
Harness:		Ignition:	
Ammeter	477, 480, 493-494, 498-499, 711-712	Coil:	
Extension - See "Front".		L-6	353, 477, 480, 498-499
Front	475, 710	V-8 ²	711
Instrument Panel - See "Main".		Switch/Lock	383, 477, 480, 493-494, 514, 516, 709, 711-712
Main	477, 480, 493-494, 514, 516	Inner Fender	447, 448, 450
Rear	483-484	Inside Rear View Mirror	NRF ¹
Headlamp:		Introduction	1
Assembly	489	Instrument Panel:	
Dimmer Switch	477, 480, 505	Ash Tray	121
Switch - Installation	493-494	Assembly	107
Wiring	117, 475, 477, 480, 489, 493-494, 497	Bezel	477, 480, 493-494
Headliner - Sound Deadener	115	Cluster	477, 480, 493-494
Heater	NRF ¹	Fuel Gauge	493-494
Heater Delete (Cover Plates, Etc.)	121	Glove Box	122
Heavy Duty Transmission	650-656	Harness (Main)	477, 480, 493-494, 514-516, 710-712
High Beam Indicator	493-494	Heater Delete Cover	121
Hinge:		Radio Delete	121
Door	118, 142	Wiring	477, 480, 493-494
Hood	465	Intake Manifold Vacuum Fittings	108, 370, 378
Hinge Cover - Door	142	Interior Rear View Mirror	NRF ¹
Hole Tape - Firewall	241-242		
Hood:		J	
Assembly (Braces & Reinforcement)	458, 460	Jack Stowage	577-578
Bumpers	462		
Cowl Seal	444, 462	K	
Emblems	464	Key Codes	5
Hinges	465	Keylock - Ignition	383, 477, 480, 493-496, 514, 516, 709, 711-712
Latch/Lock Panel/Mechanism	460, 526, 535-536	Kick Panel & Vent	110-111, 113
Hood-to-Cowl Seal	444, 462	Knob, Shifter	392
Horn:			
Button	418		
Relay	477, 480, 504		
Vibrator (Deluxe Equipment)	733		
Wiring	475, 490-494		
Hoses & Clamps - Radiator & Heater	378		
Hoses - Power Steering (RPO-350/351)	671, 674, 676, 678-679, 681, 683, 687		
Hubcaps	426		
Hydraulic Steering - See "Power Steering".			

¹ NRF = No Reference Found.

² For completeness, review L-6 info when accessing V-8 info.

INDEX

For 1955 Chev Truck Assembly Manual - 31xx/32xx Series

(1/2-Ton Pickups ONLY - Not Panel Trucks)

L		M	
Lamp:		Main Brake Cylinder - See "Master Cylinder".	
Back-up	483-484, 514-516	Manifold - Exhaust	
Brake/Stop	477, 480, 497, 505, 510-511, 514-515	L-6	410-411
Dome	116-117, 493-494, 497	V-8 ²	703
Headlamp	475, 477, 480, 489, 497	Manifold (Intake) - Vacuum Fittings	108, 378
High Beam Indicator	493-494	Manual Antenna	NRF ¹
License Bracket - Rear	483-484, 511	Manual Transmission - See "Transmission - Manual".	
Parking	475, 489, 497	Master Cylinder:	
Tail	483-484, 497, 510-511, 514-515	Installation	327-328, 331
Latch/Lock:		Inspection Cover (in Floor)	101
Door	120, 136-137	Mat - Floor	94
Hood	460, 526	Mirror:	
Leaf Spring - See "Spring".		Exterior, Rear View	144, 589-591
Lever:		Interior, Rear View	NRF ¹
Shift	392	Motor Mount	387
Turn Signal	NRF ¹	Mouldings:	
License Plate Area - Rear (incl. Lamp)	483-484, 511	Door	134, 147, 733
License Bracket - Front	561	Fender	466
Light - See "Lamp"		Rear Window	105, 733
Lighter, Cigarette	733	Step Panel	126
Linkage:		Windshield	104, 733
Accelerator:		Mount - Engine & Transmission	387
L-6	359	Muffler - Exhaust	410
V-8 ²	698, 709, 716-717		
Clutch	365	N	
Steering	421	Neutral Safety Switch - Auto Trans	633, 635
Transmission			
Automatic	622-628, 639-644	O	
Manual	392-393, 395-396	Oil Bath Air Cleaner (RPO-216)	598-599
Lock - Ignition	383, 477, 480, 493-496, 514, 516, 709, 711-712	Oil Filler Tube/Cap:	
Lock Codes	5	L-6	376
Lock - Door	136-137	V-8 ²	701
Loose Parts Box	574-575	Oil Filter	604-605
Lubrication:		Oil Level Gauge - See "Dipstick".	
Fittings	6	Oil Pressure Sending Unit & Gauge (mech)	493-494, 520, 713
Instruction Charts	571-573	Outer Panel - Bed (3124 Only)	127, 129-130
		Outside Rear View Mirror	144, 589-591
		Overdrive	646-649
		P	
		PCV System	600-601
		Parking Brake:	
		Assembly (cables, etc.) & Installation:	
		Auto Trans	317, 337-339, 343
		Manual Trans	630
		Instruction Index	315-316
		Parking Lamp	475, 489, 497
		Parts - Stowage, Loose	574-575
		Pedal - Accelerator	359
		Pedal Assembly - Brake	327-328
		Petcock - Radiator	538-539, 692, 694-695
		Positive Crankcase Ventilation System	600-601
		Positraction - See "Anti-Spin Differential"	
		Power Brake Assembly (RPO-213)	595-597
		Power Steering (RPO-350/351)	671-687
		Pressure Sending Unit & Gauge - Oil (mech)	493-494, 520, 713
		Propeller Shaft - See "Drive Shaft".	
		Pulleys - Engine	381

¹ NRF = No Reference Found.

² For completeness, review L-6 info when accessing V-8 info.

INDEX

For 1955 Chev Truck Assembly Manual - 31xx/32xx Series

(1/2-Ton Pickups ONLY - Not Panel Trucks)

R		S	
RPO-210 - Rear View Mirror Instruction	589-591	Sash - Door window	134-135
RPO-211 - Rear Shock Absorber Shield Instruction	592	Schematics:	
RPO-213 - Brake Booster Instruction (Vacuum)	595-597	Entire Car	523-525
RPO-216 - Air Cleaner (Oil Bath)	598-599	Starting Circuit - Auto Trans	645
RPO-217 - Positive Crankcase Ventilation Instruction	600-601	Seals/Sealer - Body	221-226, 233-240, 444, 446-447, 449-450, 462
RPO-218 - Rear Bumper Instruction	602-603	Seat	
RPO-237 - Oil Filter	604-605	Air Cushion (RPO-269)	615-616
RPO-241 - Governor Equipment Instruction	606-607	Standard	123-125
RPO-261 - Sunshade Equipment Instruction	612, 733-734	Section 0 - Index, Misc. Charts & Instructions	2-26
RPO-269 - Air Cushion Seat Instruction	615-616	Section 1 - Cab Assembly	27-242
RPO-271 - Radiator Overflow Condenser Instruction	617	Section 2 - Frame	243-281
RPO-314 - Automatic Transmission Instruction	620-644	Section 3 - Front Suspension	282-295
RPO-315 - Transmission Overdrive Equipment Inst.	646-649	Section 4 - Rear Suspension	295-314
RPO-316 - Heavy Duty Transmission Instruction	650-656	Section 5 - Brakes	315-349
RPO-318 - Four Speed Transmission Instruction	657-661	Section 6 - Engine	350-388
RPO-320 - Electrical Windshield Wiper Instruction	662	Section 7 - Transmission	389-396
RPO-326 - Heavy Duty Generator Equipment	663-665	Section 8 - Fuel & Exhaust	397-416
RPO-341 - Side-Mounted Wheel Carrier Instruction	667-670	Section 9 - Steering Gear	417-424
RPO-350/351 - Power Steering Equipment Instruction	671-687	Section 10 - Wheels & Tires	425-439
RPO-357 - Rear Stabilizer Instruction	688-689	Section 11 - Sheet Metal	440-471
RPO-408 - V-8 Engine Instruction	691-717	Section 12 - Electrical	472-525
RPO-423 - Running Board Instruction	732	Section 13 - Radiator	526-559
RPO-430 - Deluxe Equipment Instruction	733-734	Section 14 - Bumpers & Misc.	560-578
Radiator:		Series Designation Moulding - Fender	466
Cap	538	Sheet Metal:	
Hoses & Clamps	378	Cab:	
Installation	526, 538	Cab Assembly	27-242
Overflow Condenser (RPO-271)	617	Door	132
Overflow Hose	538	Gravel Deflector	567
Petcock	538-539, 692, 694-695	Bed:	
Radiator Support - See "Core Support".		Bed Assembly	127, 129-130, 215-220
Radio:		Running Board	468, 567, 732
Delete	121	Fender - Front	444-450
Installation	NRF ¹	Braces	444-445
Speaker - Front	NRF ¹	Emblems	466, 715
Speaker - Rear	NRF ¹	Inner	447-448, 450
Speakers - Stereo	NRF ¹	Installation	444-445, 447, 449-450
Wiring	NRF ¹	Sealer/Seals	235, 237, 446-447, 449- 450
Rear Axle	296, 300, 303	Series Designation Moulding	466
Rear Fender		Skirt (Inner Fender)	447-448, 450
Braces	467	Fender - Rear:	
Installation	467	Braces	467
Sealer/Seals	235	Installation	467
Rear Spring:	296-298, 300, 303, 306	Sealer/Seals	235
Rear View Mirror:		Grille/Radiator Area:	
Interior	NRF ¹	Core Support	530-532, 540
Exterior (RPO-210)	144, 589-591	Filler Panels	533-535
Rear Window:		Grille	529, 537
Installation	105-106, 733	Hood Latch Panel	535-536
Reveal (Garnish) Mouldings	105, 733	Radiator	538
Weatherstrip	105-106, 733	Instruction Index	440
Regulator - Door Window	135, 140	Running Board	468, 567, 732
Remote control Assembly - Door	137	Shield - Accelerator Control	446
Resistor - Ballast	355, 504	Shift Speed Chart - Auto Trans	643
Reveal Mouldings:		Shifter:	
Door	147, 733	Knob & Lever:	
Rear Window	105, 733	Auto Trans	625
Windshield	104, 733	Manual Trans	392
Road Draft Tube	376	Mechanism:	
Running board	468, 567, 732	Auto Trans	622-628
		Manual Trans	392-393, 395-396

¹ NRF = No Reference Found.

² For completeness, review L-6 info when accessing V-8 info.

INDEX

For 1955 Chev Truck Assembly Manual - 31xx/32xx Series

(1/2-Ton Pickups ONLY - Not Panel Trucks)

S (Cont.)	T
Shock Absorbers:	Table of Contents (by Section) 2-4
Chart 9	Tailgate:
Front 291	Cable (3124 Only) 127-128
Rear 313	Cover (3124 Only) 130
Rear Shield (RPO-211) 592	Emblem & Insert (3124 Only) 130
Side Outer Panel - Bed (3124 Only) 127, 129-130	Striker & Lock (3124 Only) 128
Side-Mounted Wheel Carrier (RPO-341) 667-670	Tail Lamp - Installation & Wiring 130, 483-484, 497, 510, 511, 514-515
Solenoid - See "Starter/Solenoid".	Tank - Fuel 399-400, 405-407
Spare Tire - See "Tires".	Tape - Hole, Firewall 241-242
Spark Plug Wires/Brackets: 353	Temp Sending Unit - Coolant 493-494, 520, 711-713
Cable Installation 477, 480, 493-494, 516, 521	Throttle - See also "Accelerator".
Springs:	Throttle Control (Knob & Cable) 383
Front 283, 285, 288	Throwout Bearing 369
Rear 297-298, 300, 303, 306	Tires:
Stabilizer Bar:	Installation 426
Front 294	Instruction Index 425
Rear (RPO-357) 688-689	Spare 429-431, 433, 436, 667-670, 670
Starter/Solenoid:	Top, Trim Pad (Headliner) 115
Installation 356	Transmission - Automatic (RPO-314):
Wiring 477, 480, 498-499	Bell Housing 621
Steering:	Cooling Lines (Fluid) 632
Adjustment 10, 424	Covers (Floor) 636
Box 421	Fluid Level Indicator (Dipstick) NRF ¹
Column:	Flywheel 621
Installation 419-420	Gear Selector Indicator 625
Supports 419	Installation 620-644
Instruction Index 417	Instruction Index 620
Linkage 421	Linkage & Adjustments
Power (RPO-350/351) 671-687	L-6 622-628, 639-644
Wheel 418	V-8 ² 707-708, 716-717
Step Panel (Door) 126	Neutral Safety Switch 633, 635
Step - See "Running board".	Overdrive 646-649
Stop Lamp - See "Brake Lamp";	Parking Brake for 630
Stowage - Jack 577-578	Schematic - Starting Circuit 645
Stowage - Loose Parts 574-575	Shift Speed Chart - Auto 643
Striker - Door 120	Shifter Knob 625
Striker & Lock - Tailgate (3124 Only) 128	Shifter Mechanism 622-628
Sun Visor (Sunshade):	Test Procedure 643
Exterior NRF ¹	Torque Converter 621
Interior 104, 612	
Suspension, Front:	
Assembly 283, 285, 288-294	
Instruction Index 282	
Suspension, Rear:	
Assembly	
Instruction Index 296	
Sway Bar:	
Front 294	
Rear (RPO-357) 688-689	

¹ NRF = No Reference Found.

² For completeness, review L-6 info when accessing V-8 info.

INDEX

For 1955 Chev Truck Assembly Manual - 31xx/32xx Series

(1/2-Ton Pickups ONLY - Not Panel Trucks)

T (Cont.)

Transmission - Manual:	
Bell Housing	369
Caution Tag	389
Cover (Floor)	101
Four Speed (RPO-318)	657-661
Heavy Duty (RPO-316)	650-656
Installation (to engine)	390
Instruction Index	389
Linkage & Adjustments:	392-393, 395-396
L-6	392-393, 395-396
V-8 ²	707-708, 716-717
Mount	387
Shifter Knob	392
Shifter Mechanism	392-393, 395-396
Torque Converter - Auto Trans	621
Trim Panel - Door	140-141
Trim Pad - Top (Headliner)	115
Trim Tag	568
Jack Stowage	577-578
Turn Signal:	
Lever	NRF ¹
Wiring	NRF ¹
U	
Universal Joints	307
V	
Valve Cover Decal	388
V-Belts - See "Drive Belts".	
Vacuum:	
Advance	108, 370, 378
Fittings - Manifold	108
Power Brake (RPO-213)	595-597
Vent - Kick Panel (Cowl)	110-111, 113
Ventilator Assembly - See "Cozy Wing".	
Ventilator Pipe - Crankcase	376
VIN Plate	568
Visor, Sun (Sunshade):	
Exterior	612
Interior	104
Voltage Regulator:	
Installation	355
Wiring	477, 480, 504

W

Water Pump - Drive Belt & Pulley	381
Water Temp Sending Unit & Gauge (mech)	493-494, 520, 711-713
Weatherstrip:	
Door	148
Window - Rear	105-106
Windshield	104, 233, 733
Welding:	
Details	28-51, 57-59, 61-67, 73-74, 77, 81-84, 27
Instruction Index	27
Wheel & Tire Assembly	426
Wheel Carrier:	
Side Mounted (RPO-341)	667-670
Standard (under bed)	429-431
Wheel - Steering	418
Wheel Turn Adjustment	10
Window - Door:	
Regulator	135, 140
Sash	134-135, 139
Seal	135
Window - Rear:	
Installation	105-106
Reveal (Garnish) Mouldings	105, 733
Weatherstrip	105-106
Windshield:	
Garnish/Reveal Mouldings:	
Exterior	104, 733
Interior	104, 733
Weatherstrip	104, 233, 733
Blade Assembly	107
Cable	107
Electric (RPO-320)	662
Linkage	107
Mechanism	107
Motor	107
Switch	107
Transmission	107
Vacuum System	108

¹ NRF = No Reference Found.

² For completeness, review L-6 info when accessing V-8 info.

INDEX

For 1955 Chev Truck Assembly Manual - 31xx/32xx Series

(1/2-Ton Pickups ONLY - Not Panel Trucks)

W (Cont.)

Wiring:	
Ammeter Harness	477, 480, 493-494, 498-499, 711-712
Antenna - Manual	NRF ¹
Back-up Lamp	483-484, 514-516
Ballast Resistor	355, 504
Battery Cables	477, 480, 498-499
Brake Lamp (Stop Lamp)	477, 480, 497, 505, 510-511, 514-515
Cigarette Lighter	733
Coil:	
L-6	353, 477, 480, 498-499
V-8 ²	711
Dash/Instrument Panel	477, 480, 493-494
Dimmer Switch	477, 480, 505
Distributor	353
Dome Lamp	116-117, 493-494, 497
Engine Harness - See "Front Harness".	
Extension Harness - See "Front Harness".	
Front Harness	475, 710
Fuel Gauge & Sending Unit	483-484, 493-494, 507-508, 510
Fuse	497
Gauges	477, 480, 493-494
Generator	475, 665
Ground Straps	633, 711
Headlamps & Switch	117, 475, 477, 480, 489, 493-494, 497
Heater	NRF ¹
High Beam Indicator	493-494
Horn Button	493-494
Horn Relay	477, 480, 504
Horns	475, 490-492, 733
Ignition Switch	477, 480, 493-494, 514, 516, 709, 711-712
Instrument Panel (Main) Harness	477, 480, 493-494, 514, 516, 710-712
License Plate Lamp	483-484, 511
Main Harness	477, 480, 493-494, 514, 516, 710-712
Manual Antenna	NRF ¹
Neutral Safety Switch	633
Parking Lamps	475, 489, 497
Radio	NRF ¹
Rear Harness	483-484
Schematics - Entire Car	523-525
Spark Plugs	353
Speaker - Front	NRF ¹
Starter/Solenoid	477, 480, 498-499
Tail Lamp	497, 510-511, 514-515
Turn Signal	NRF ¹
Vibrator Horn (Deluxe Equipment)	733
Voltage Regulator	477, 480, 504
Windshield Wiper	662

¹ NRF = No Reference Found.

² For completeness, review L-6 info when accessing V-8 info.