

When the truck is high enough for adequate access to the mounts, loosen each of the bull but do not remove them. You may have to use some of your favorite rust buster to get the factory nuts loose. Only loosen one side at a time. Keep in mind you may have to remove your carpeting to access the head of the mount bolts.