


# Typical Handle Relocator

## Installation Instructions

(Click on picture to purchase part.)

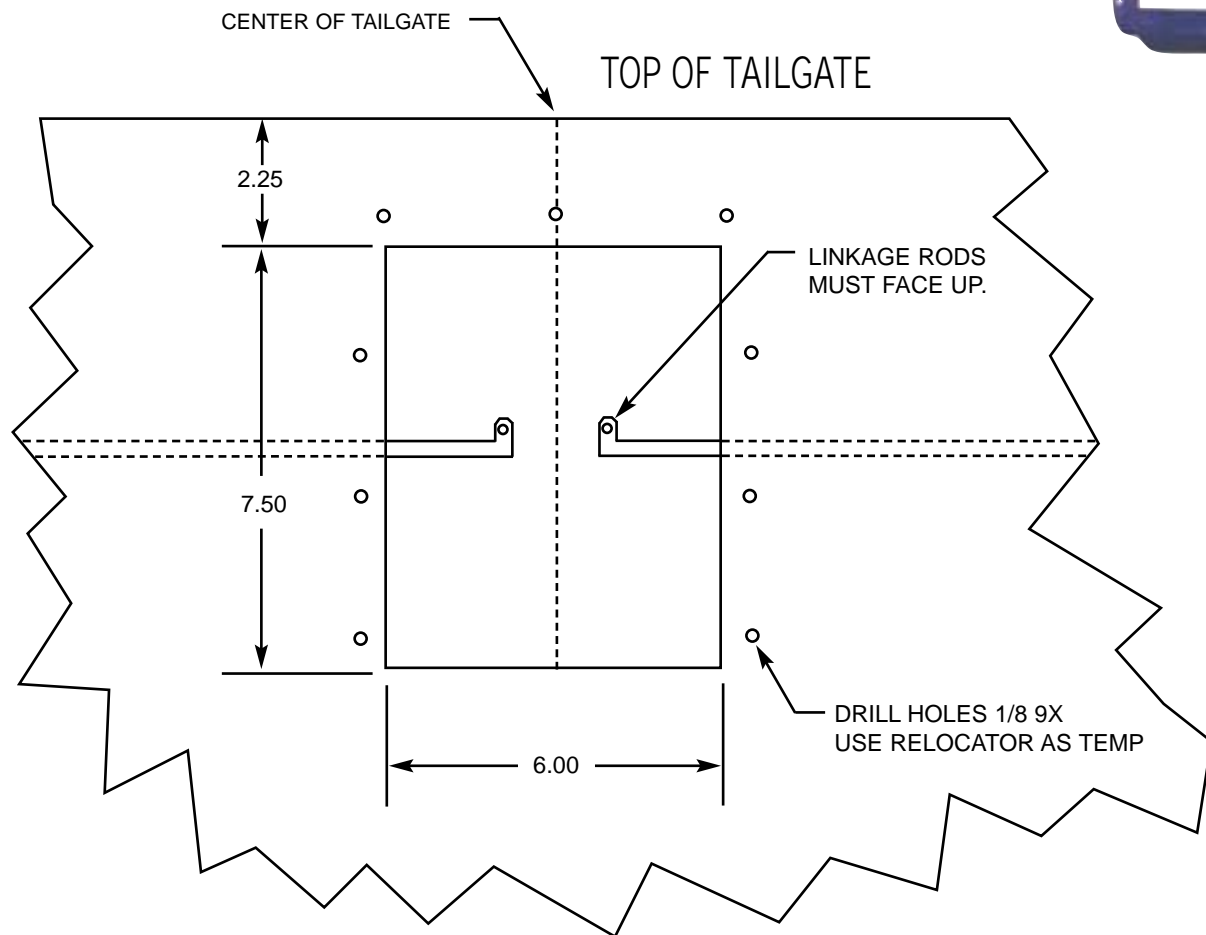

1. OPEN THE TAILGATE & REMOVE THE 3 TORX HEAD BOLTS FROM THE BACK OF THE TAILGATE, THAT HOLD THE HANDLE IN PLACE. NOW LFT THE HANDLE OUT OF THE PRIGAL POSITION AND UNCLIP THE CONNECTINGS.
2. NOW WITH A MARKING PEN AND MEASURING TAPE LOCATE LOCATE CENTER OF TAILGATE AND MEASURE 2.25 FROM THE TOP AND MARK A LINE.
3. MEASURE 7.50 DOWN FROM THE PREVIOUS LINE (STEP 2) AND MARK A LINE.
4. MEASURE 6.00 WIDE CUT OUT CENTERED ON THE TAILGATE AND MARK. THIS WILL DETERMINE THE AREA TO BE CUT.
5. USING A CUTTING WHEEL OR OTHER CUTTING DEVICES, CUT THE SQUARE PATTERN OUT OF THE INSIDE SURFACE OF THE TAILGATE.
6. SWOP LINKAGE RODSD FROM LEFT TO RIGHT.
7. PLACE RELOCATOPR OVER THE SQUARE CUT OUT WITH THE HANDLE INSTALLED. POP IN THE LINKAGE AND CENTER.
8. USING THE RELOCATOR AS A TEMPLLLATE DRILL THE HOLES FOR THE SCREWS.
9. INSTALL ALL SCREWS INTO THE TAILGATE.