


# **INSTRUCTIONS**

## **1963-72 CHEVY TRUCK**

### **FRONT SHOCK MOUNT KIT**

#### **(FSMK6372)**

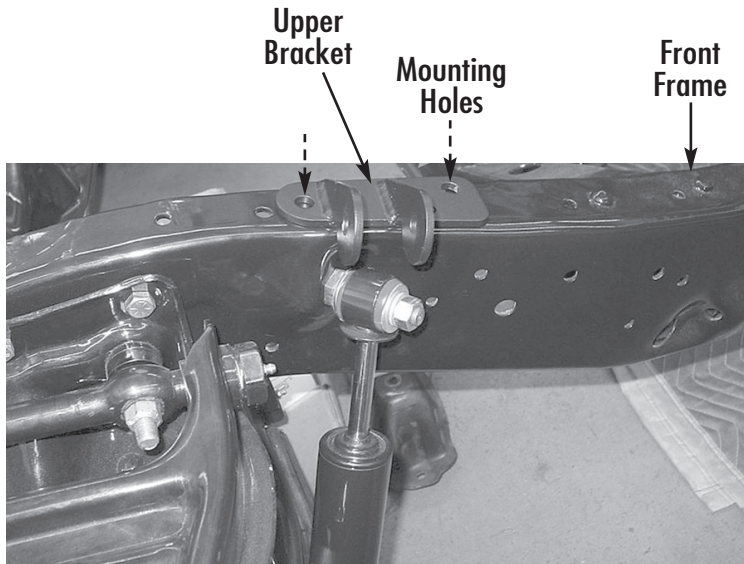

**STEPS: READ THESE INSTRUCTIONS CAREFULLY!**  
**MAKE SURE THIS KIT FITS YOUR APPLICATION PRIOR TO PAINTING OR PLATING. PARTS THAT HAVE BEEN PLATED, PAINTED OR MODIFIED MAY NOT BE RETURNED.**

1. Position shock brackets directly over existing shock stud as shown in the picture.
2. Drill the 3 mounting holes with a 3/8" drill bit, and mount upper bracket with supplied hardware.
3. Remove original upper shock stud and discard!
4. Install shock into new upper mount, using supplied hardware.
5. Enjoy.