


Now, use a long 2x4 chunk of wood on top of a floor jack to raise the body. Remember to only raise the cab as much as needed to remove the upper rubber mount. When raising the front end, watch the fan shroud for sufficient clearance.

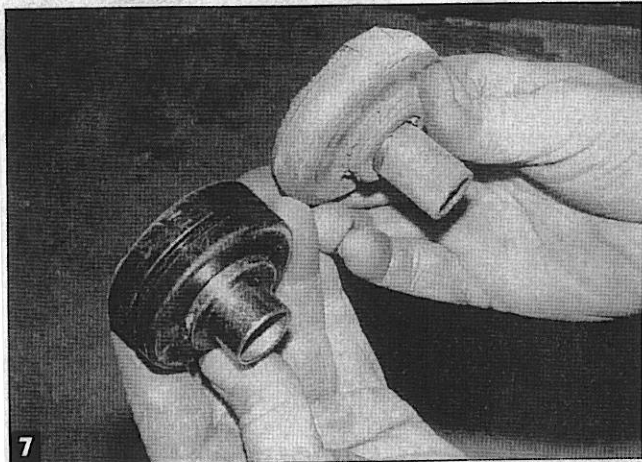

You can clearly see the difference between the new mount and the old. Believe it or not, there is a measurable difference in the way your truck ride and handle with new mounts.

'67-72 CHEVY TRUCKS